

List of Tables

Table 4-1 Spectrum Analyzer Setup.....	4-18
Table 4-2 Typical Satellite Receiver Setup	4-19
Table 4-3 Bit Error Rate (BER) to Threshold Margin Table.....	4-20
Table 5-1 IRD Pre-sets	5-17
Table 6-1 Downstream Channel Capacity.....	6-23
Table 6-2 Upstream channel capacity.....	6-23
Table 6-3 Performance Standards for Acceptable CATV Operations.....	6-25
Table 7-1 TV Services Cue Function Assignments.....	7-3
Table 7-2 Radio Service Cue Function Assignments	7-3
Table 7-3 BCD Function	7-4
Table 8-1 64 Kbps high-speed pin-out	8-11
Table 8-2 SR menu commands.....	8-13
Table 8-3 Test Tool Commands	8-13
Table 8-4 SR-8 voice channel settings	8-13
Table 8-5 IRD polling commands	8-19

List of figures

Figure 3-1 Block level system diagram.....	3-2
Figure 3-2 Connecting an IRD to a monitor or TV receiver.....	3-4
Figure 3-3 AFRTS SATNET network diagram.....	3-5
Figure 3-4 AFRTS SATNET IntelSat America 5 footprint.....	3-5
Figure 3-5 AFRTS SATNET NewSkies NSS-5 and NSS-6 footprints	3-6
Figure 3-6 AFNE Hotbird 4	3-8
Figure 3-7 DTS Satellite network diagram.....	3-10
Figure 3-8 IntelSat 701 Pacific Ocean.....	3-11
Figure 3-9 New Skies NSS-7 Atlantic Ocean and Mediterranean Sea	3-11
Figure 3-10 IntelSat 906 Indian Ocean and Persian Gulf.....	3-12
Figure 3-11 AMC-1 Ku coverage.....	3-13
Figure 4-1 Satellite dish parts.....	4-3
Figure 4-2 An offset satellite antenna.....	4-4
Figure 4-3 Feedhorn assembly	4-6
Figure 4-4 Focal length	4-7
Figure 5-1 Satellite Pointing Tools.....	5-2
Figure 5-2 Installation Parts	5-3
Figure 5-3 IRD Connections.....	5-3
Figure 5-4 Antenna angle display.....	5-4
Figure 5-5 Look angle adjustment.....	5-5
Figure 5-6 Azimuth setting.....	5-6
Figure 5-7 BSR Main Menu	5-12
Figure 5-8 Receiver Status Menu	5-12
Figure 5-9 Receiver Setup Menu.....	5-13
Figure 5-10 9834 IRD Main Menu.....	5-16
Figure 5-11 Preset and LNB Setup Menu.....	5-16
Figure 8-1 PowerVu Datacasting	8-2
Figure 8-2 PowerVu IRD RS-232 wiring.....	8-3
Figure 8-3 SR-8 connection to a printer and Figure 8-4 SR-8 connection to a PC terminal device.....	8-8
Figure 8-5 SR-8 network management port to a terminal and.....	8-9
Figure 8-6 SR-8 network management port to a PC terminal	8-9
Figure 8-7 PowerVu datacasting network	8-10
Figure 8-8 SR-8 wiring.....	8-11
Figure 8-9 PowerVu Multiplexer to SR-8 and Figure 8-10 PowerVu IRD to SR-8.....	8-12
Figure 8-11 SR-8 output ports	8-12
Figure 8-12 Fazzt network.....	8-15
Figure 8-13 IRD to Kencast connection	8-15
Figure 8-14 Fazzt configuration and interface.....	8-16

Figure 8-15 IRD control via a PC.....	8-18
Figure 8-16 Single IRD polling and Figure 8-17 Dual IRD polling.....	8-18